

Dewesoft 7 shortcuts list



Keyboard:

1. General

F1	Help: opens chapter regarding current content
F2	Go to Analog
F3	Go to Measure
F5	Save datafile
F7	Stop measurement or Storing
Ctrl+f	Full screen
Ctrl+Shift+p	Performance information
Ctrl+Shift+i	Channel information
Ctrl+Shift+d	Event viewer

2. In Measure - Storing

Space	Keyboard event
n	Text (note) event
v	Voice event

3. In Analysis

Space	Keyboard event
n	Text (note) event
v	Voice event
c	General (cursor) event

Mouse:

1. Ch.setup

- Click and drag (or ctrl+click) any column: select properties of multiple channels.

2. Measure

- Click and drag channel to the visual control: display channel on that control.

a) If "Auto scale" is disabled:

- Click on bottom/upper number on graph axis: define shown interval.
- Click on channel name on graph axis: scale it to current min/max shown.

b) If multiple channels are shown on the same graph:

- Ctrl+click on bottom/upper numbers on graph axis: define shown interval.
- Ctrl+click on channel names: scale to current min/max shown.

3. Design

- Click on visual control: click and drag corners to resize.
- Click + scroll on visual control: resize it.
- Click and drag channels to an empty area: present it in last used visual control.
- Right click on visual control: preferences and options to copy.
- Right click on empty area: options to copy/paste.

4. Analysis

- (Note that "2. Measure" applies in Analysis also.)
- Click and drag on time axis when zoomed: move backward/forward in time.
- Click and drag inside recorder then click inside lines "I" and "II": zoom in.
- Right click inside recorder: zoom out.